

 
Typical Mud Valve Configurations




1. Stem Guide with Handwheel




2. Stem Guide with 2" Nut



 3. Wall Bracket with U-Joints



 
4. Floor Box with 2" Nut




5. Indicating Floor Stand



 6. Indicating Floor Stand with Mounting Bracket*



7. Indicating Floor Stand with Bevel Gear*

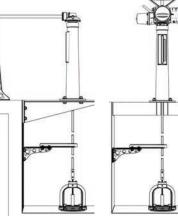

8. Indicating Floor Stand with Mounting Bracket, Bevel Gear and Horizontal Extension Stem*



Electric Actuator

* Indicating slot faces operator and is not visible in installations 6, 7 and 8.



182 Railroad Street | Troy, PA 16947 Sales: 570-297-4442 | Toll Free: 800-232-4442 | Fax: 570-297-4136

www.penntroy.com